


Welcome to MEDCOTAS

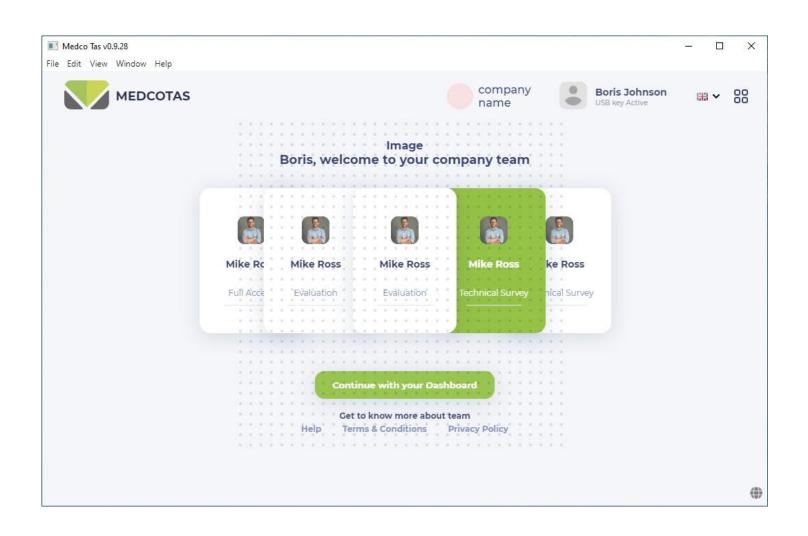


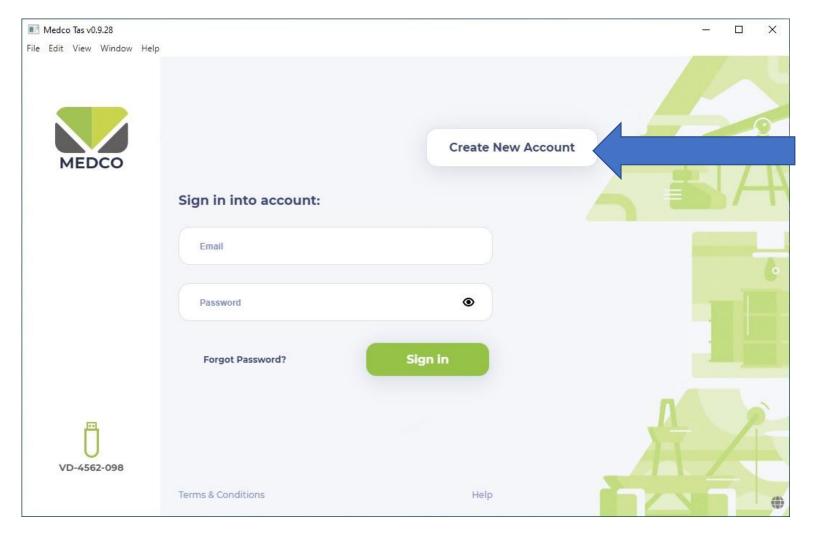

Starting MedcoTAS for the first time:

The user needs to CREATE NEW ACCOUNT

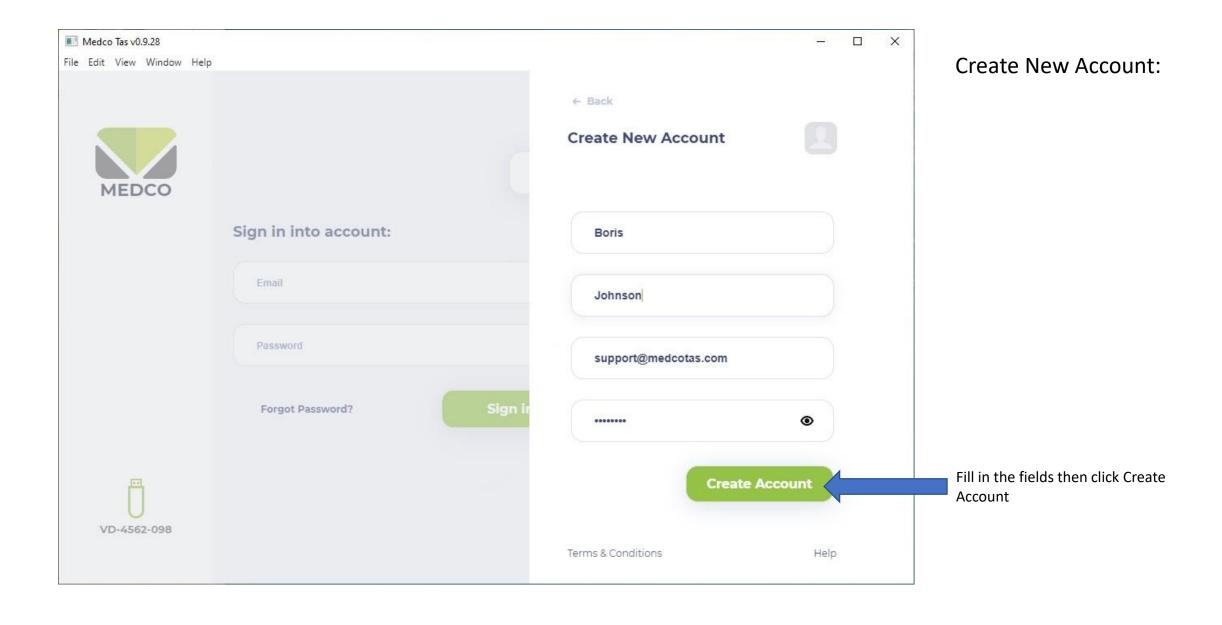

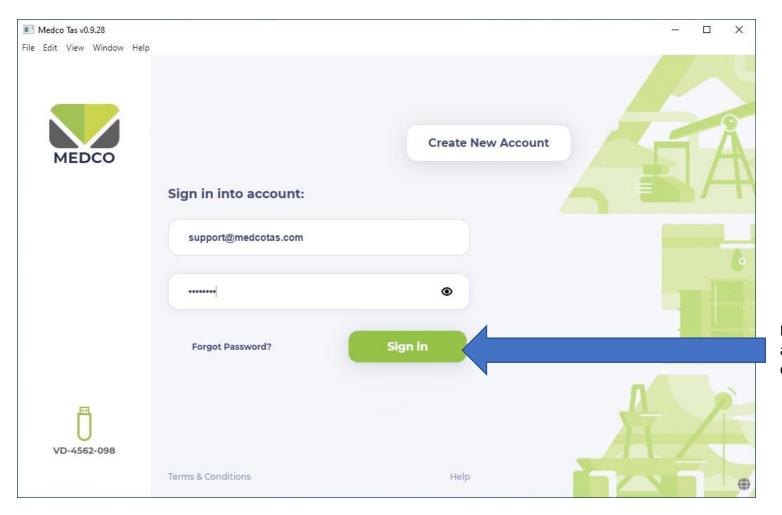

Sign In to MedcoTAS:

Enter the email and password associated with the account created in "Create New Account" step, then click "Sign In"




The Welcome Screen:


By clicking the User Name, more information regarding the user and the company can be entered, such as;

- User's photo
- Company name
- Company's website
- Company's Logo

After completing the user profile information, click "Continue to your Dashboard"

MedcoTAS Dashboard

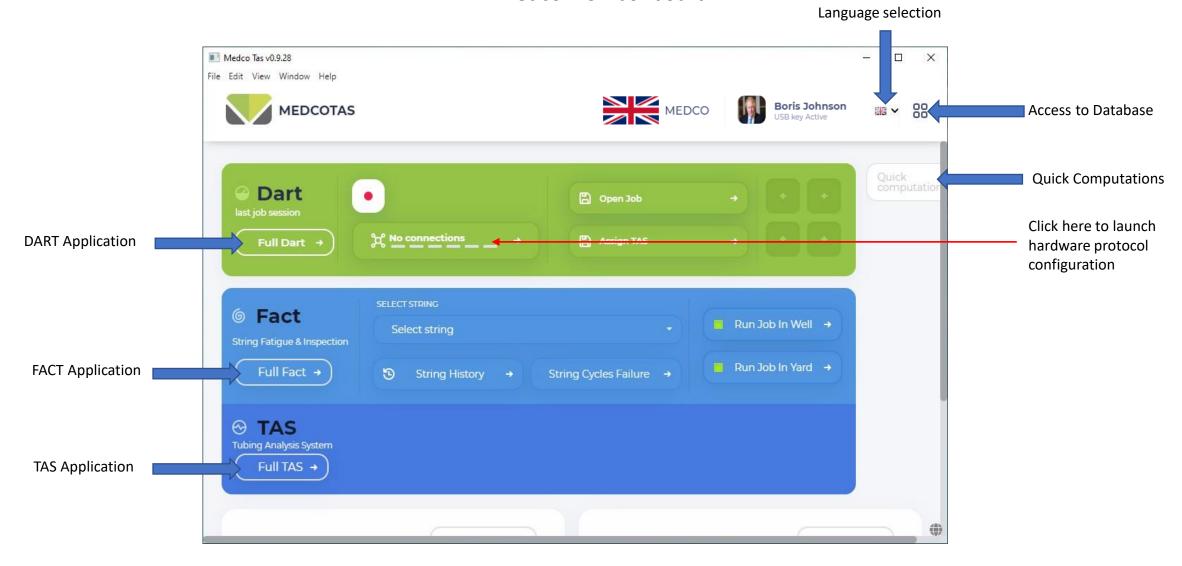


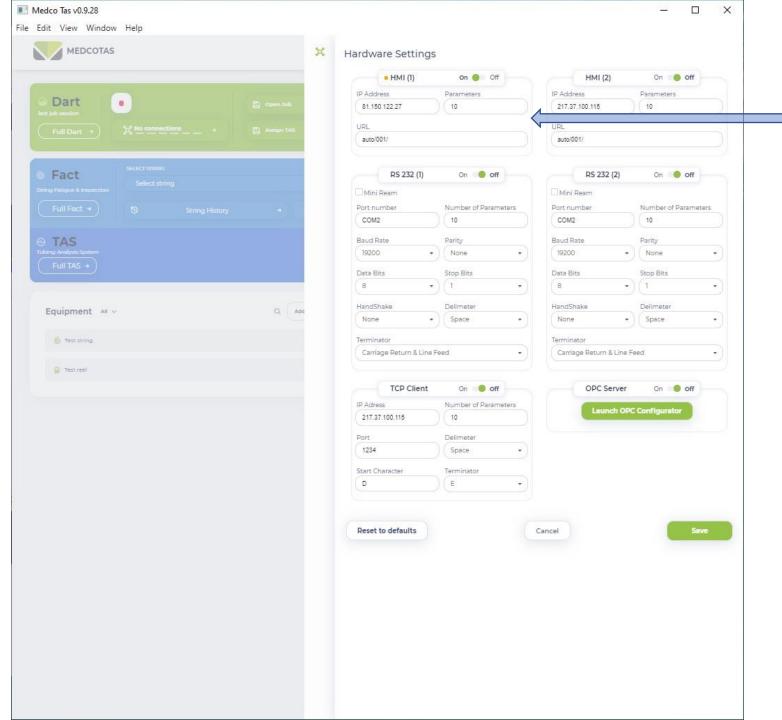


Configuring Hardware Protocol


Turn ON the relevant hardware and fill in the fields associated with the selected protocol

Launch the DART Application

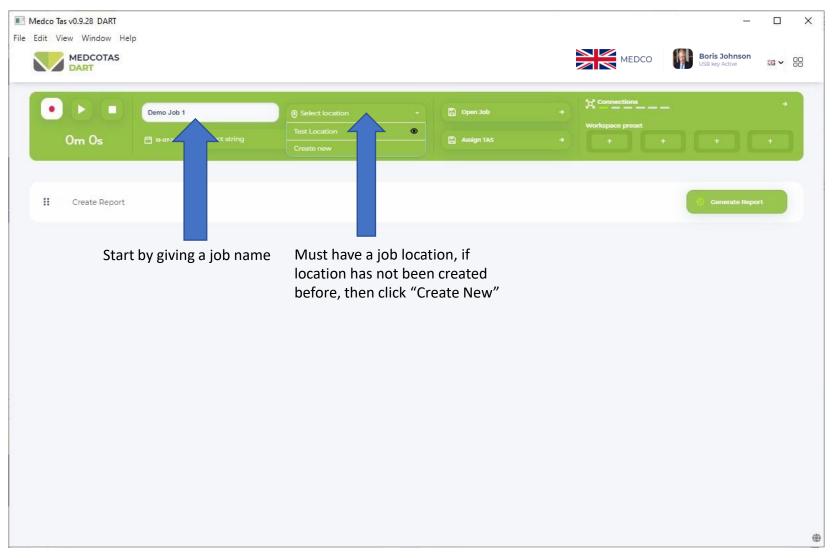


Create New Location

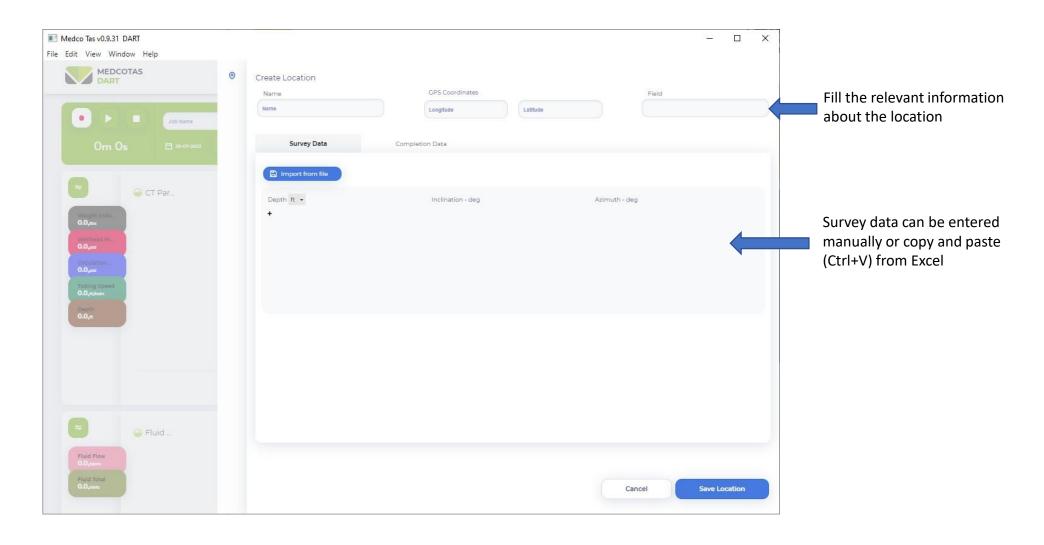

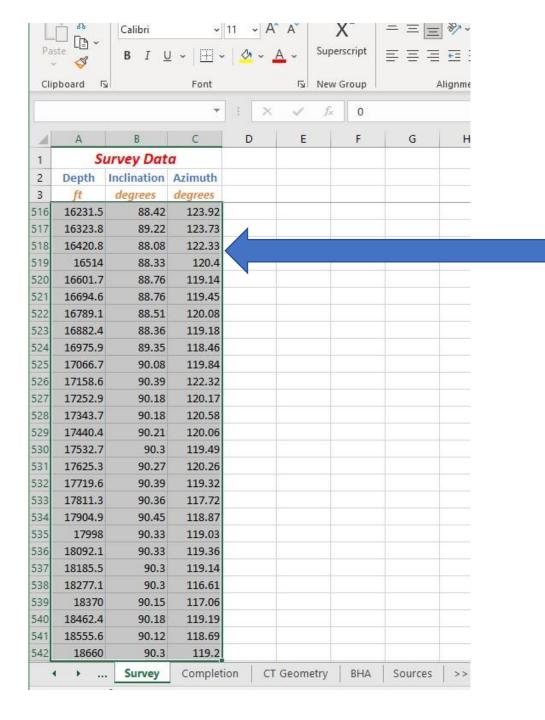


Copy Survey Data from Excel

Highlight the 3-columns (without headers) then right-click and select "Copy"

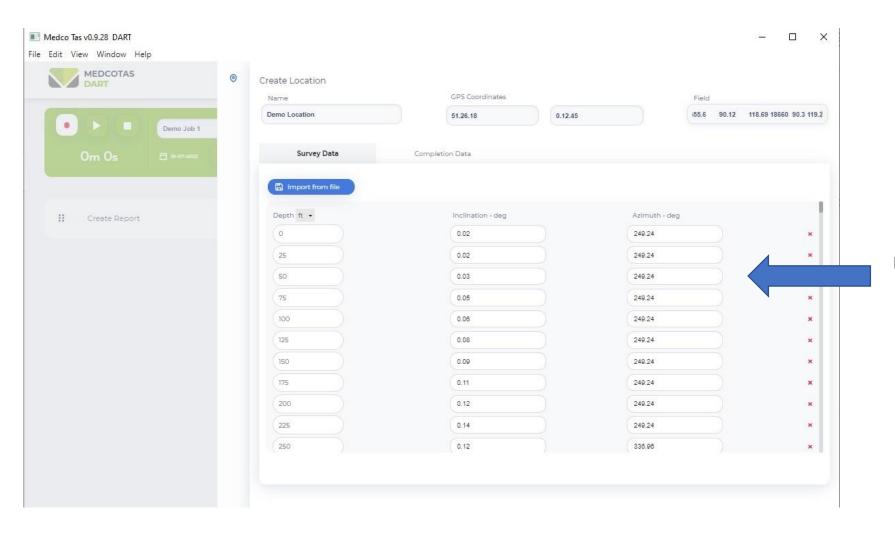


Use "Ctrl+V" to paste the data

Completion Data (1/2)

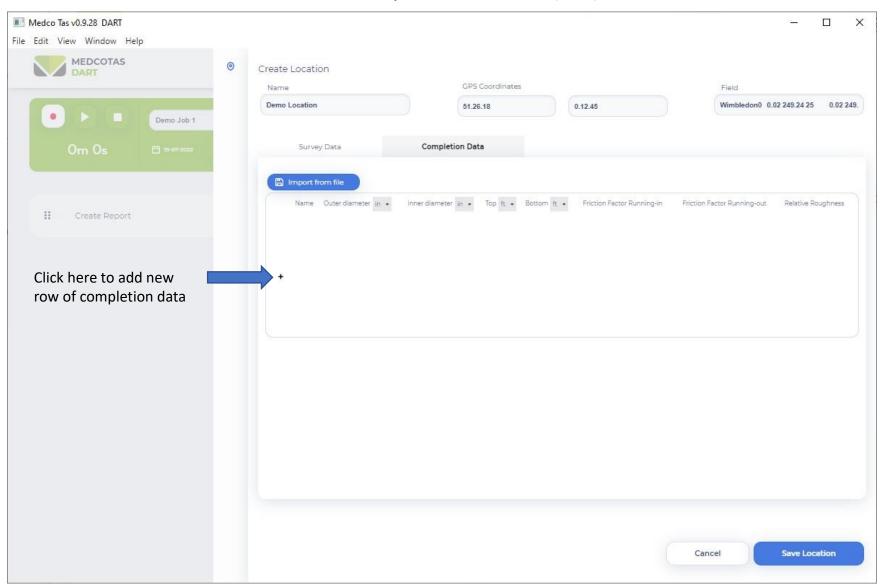


Completion Data ... continued(2/2)

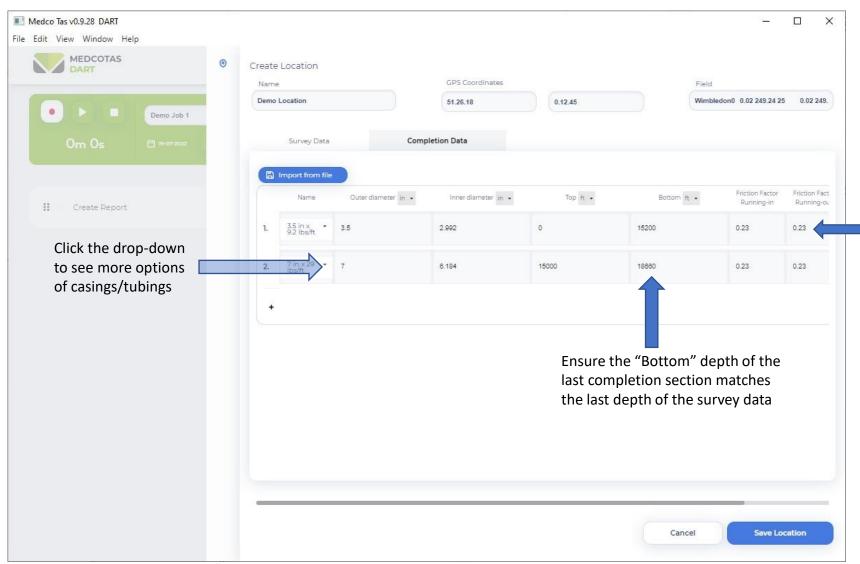


Friction Factors and Reltive Roughness figure are automatically filled in, they can be changed manually

Save Location

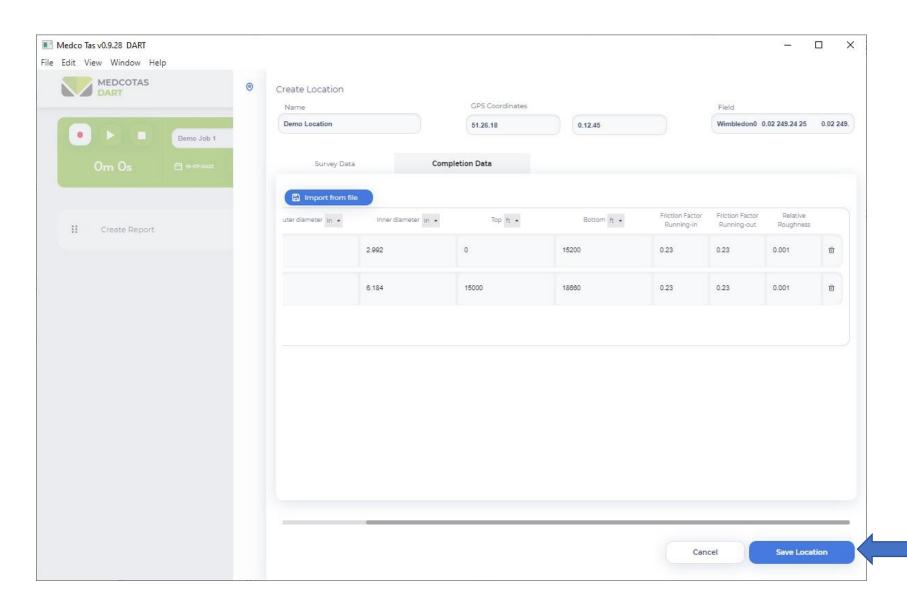


Click "Save Location"


Configure Data Displays in DART

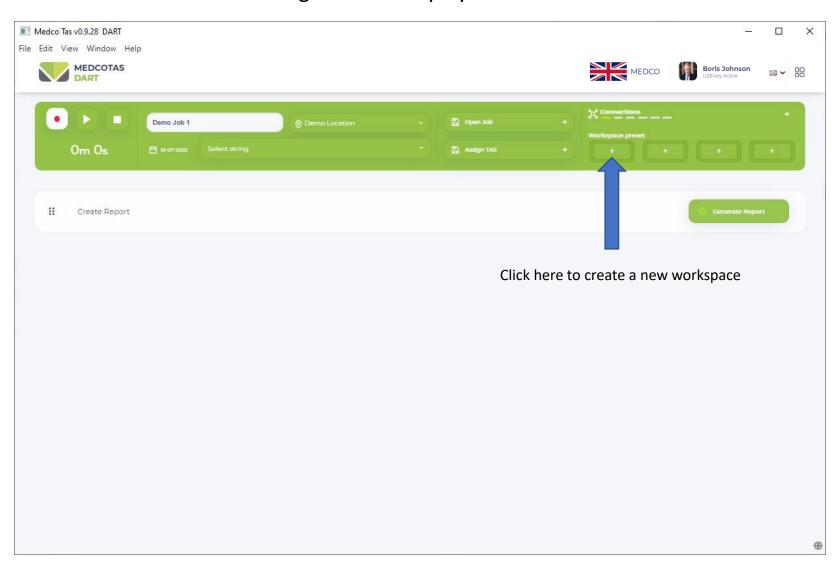


Adding Charts to Workspace

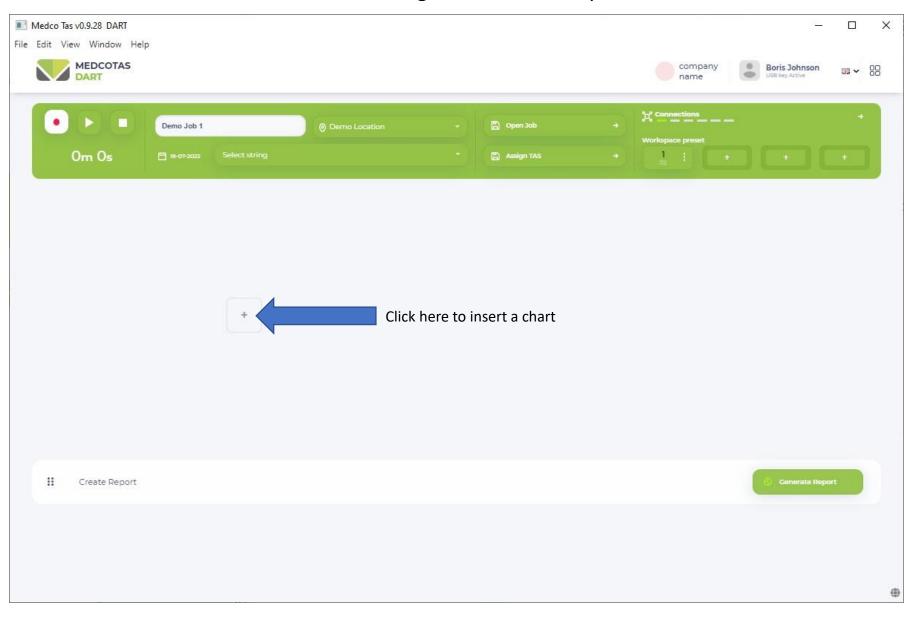

Create Charts in DART

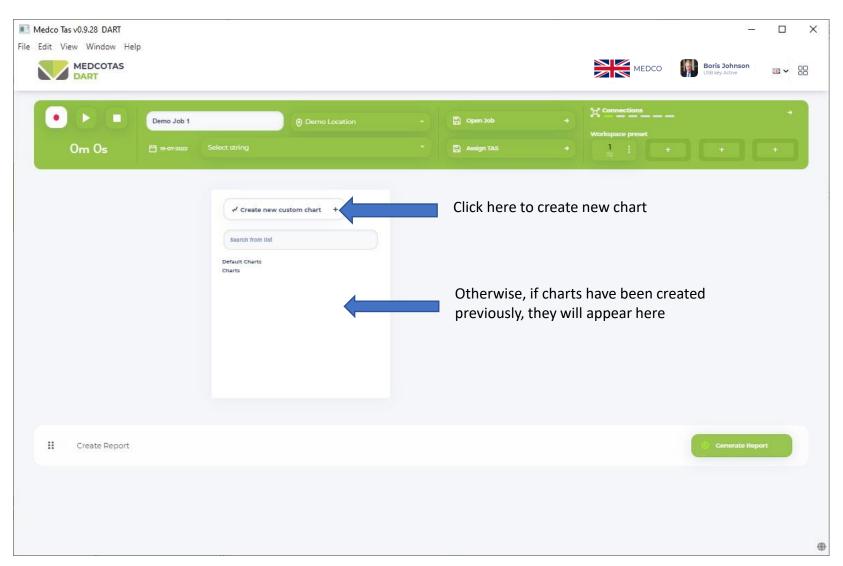


Assigning Parameters in Charts

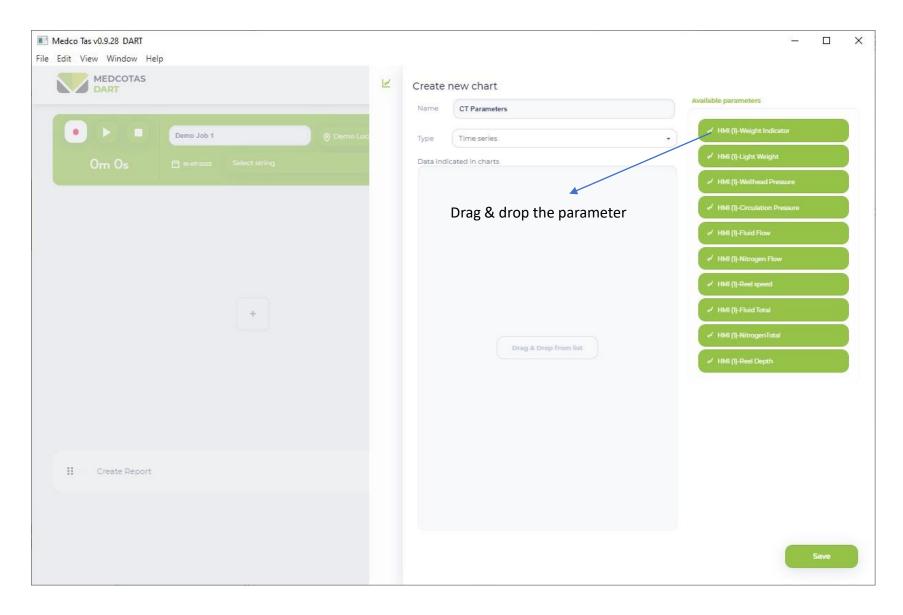


If using MEDCO's REAM HMI, the parameters in the data stream will be automatically displayed. Otherwise, the parameters will have no specific names, rather they will be generic.


Assigning Parameters to Charts ... Continued

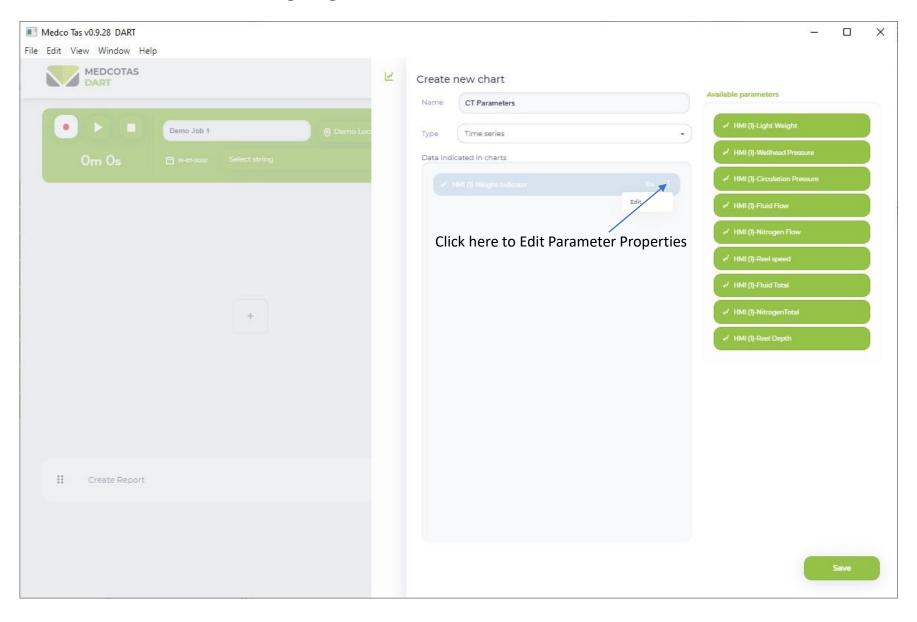


Edit Parameter Properties

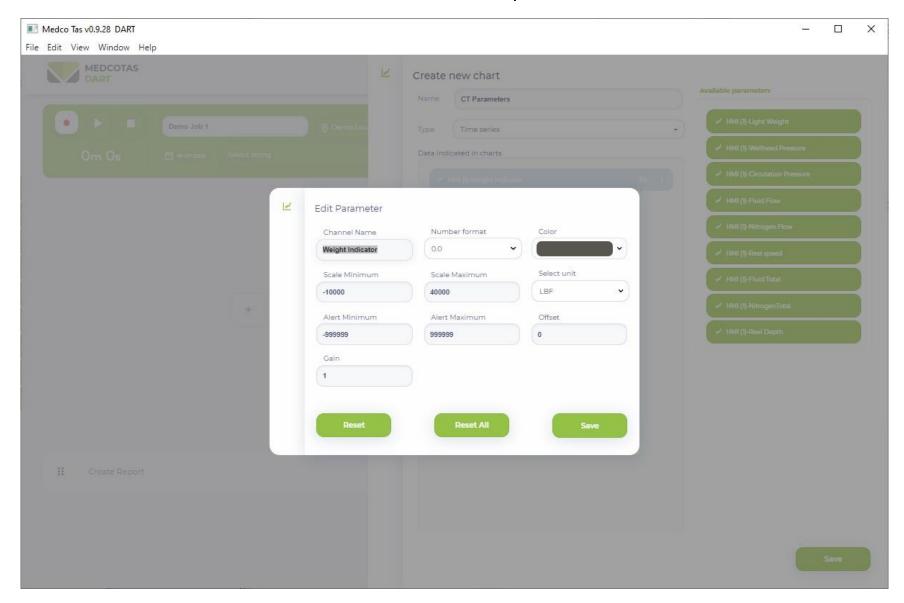


Completing Chart Editing

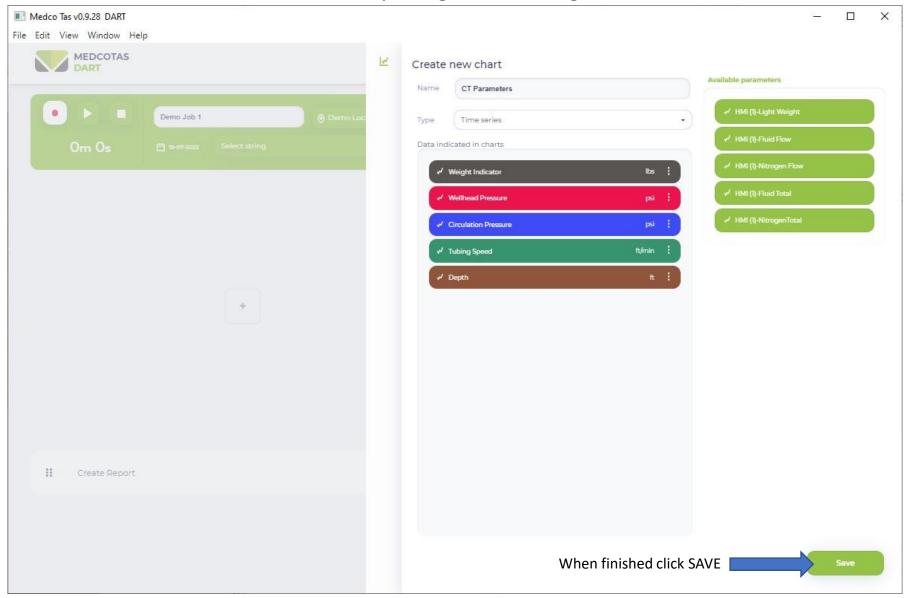


Add Another Chart

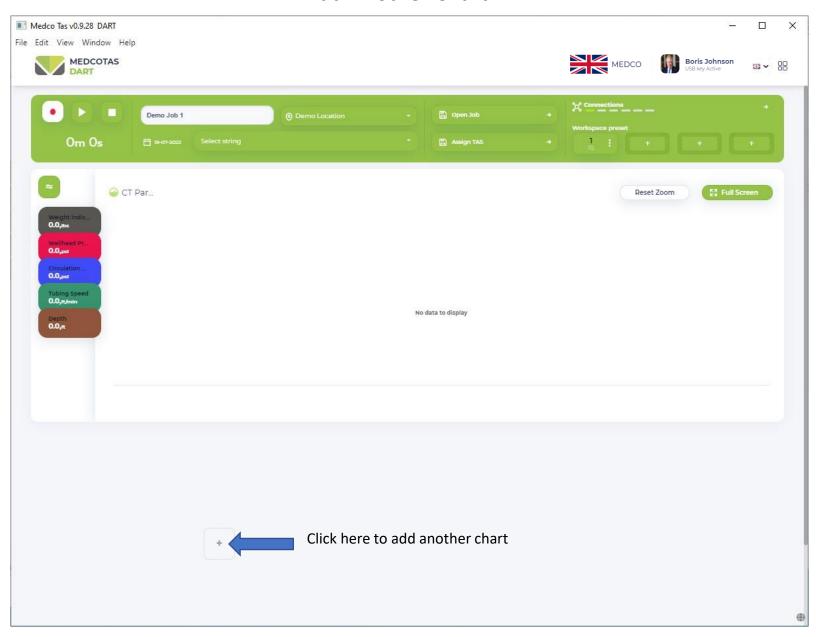


Another Time-Series Chart

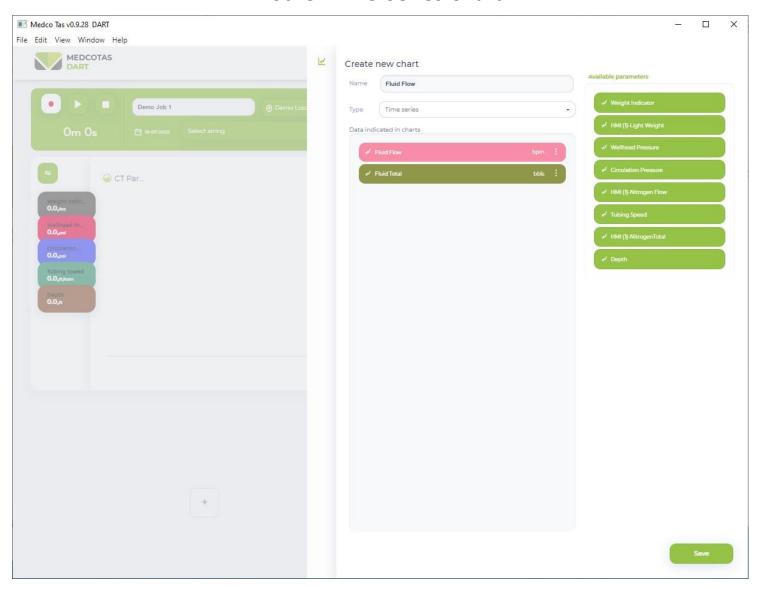


Add Depth vs Weight Chart

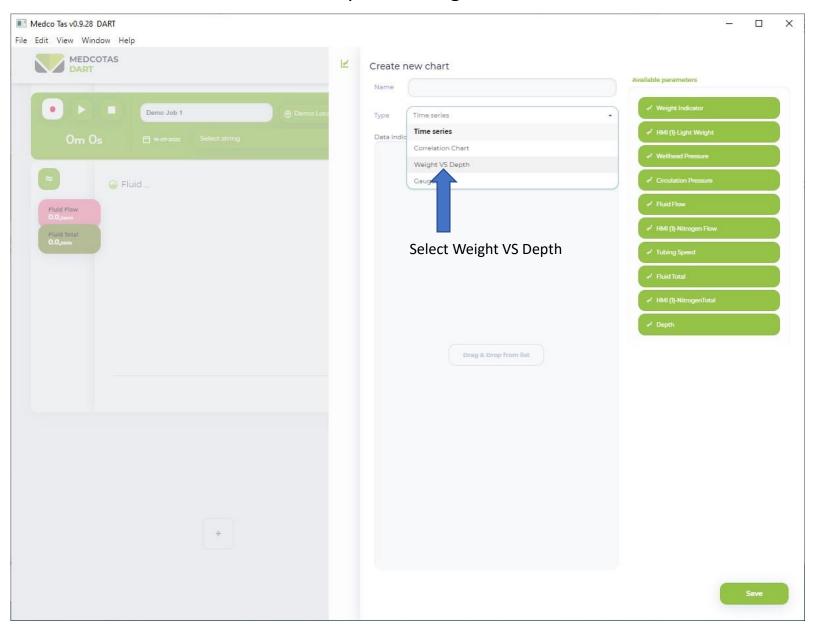


Weight vs Depth Chart

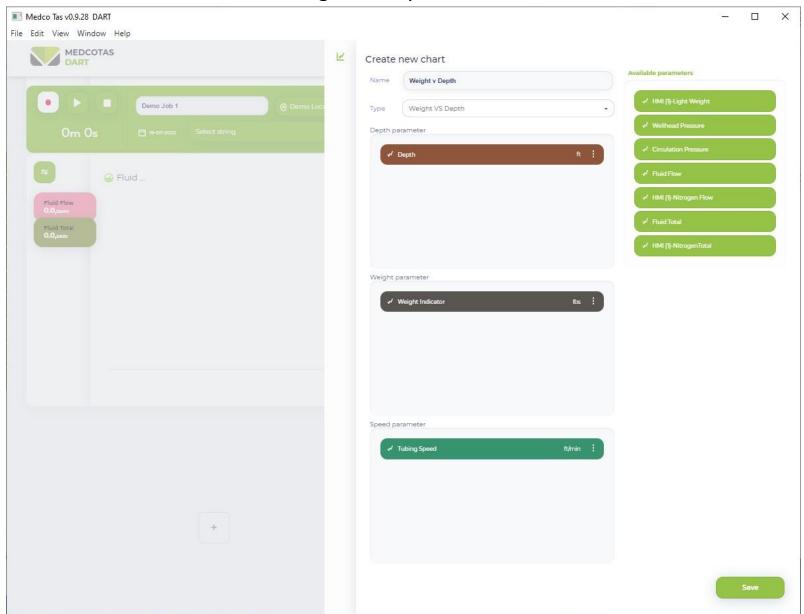


Correlation Chart

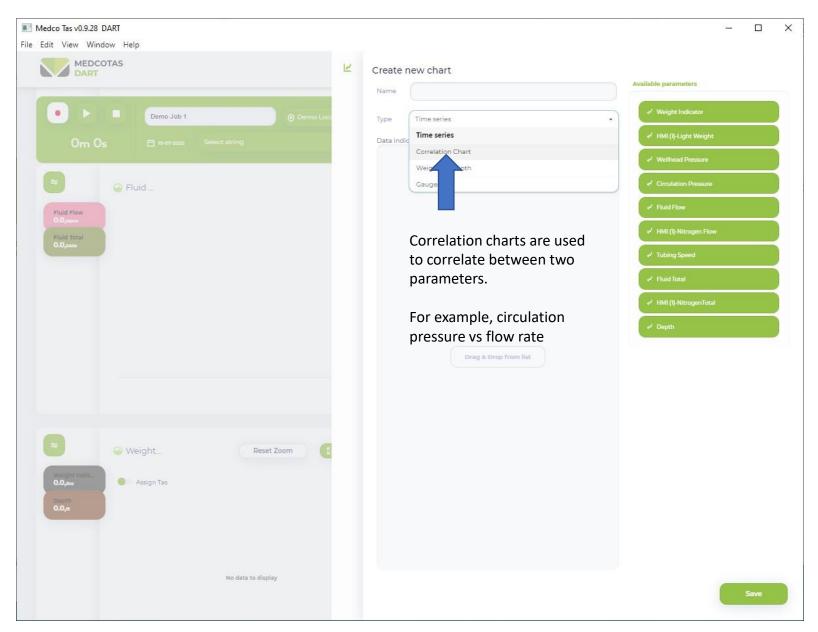

Correlation Chart ... continued

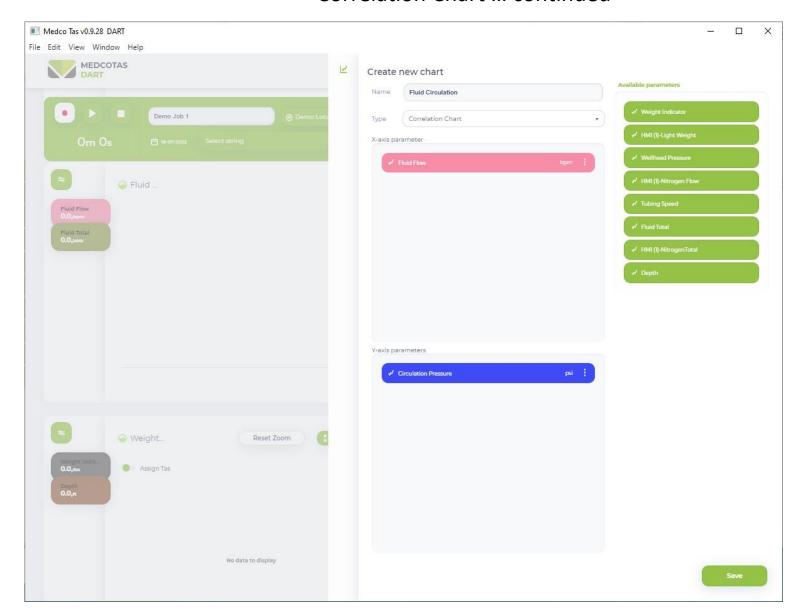


Start a DART Job

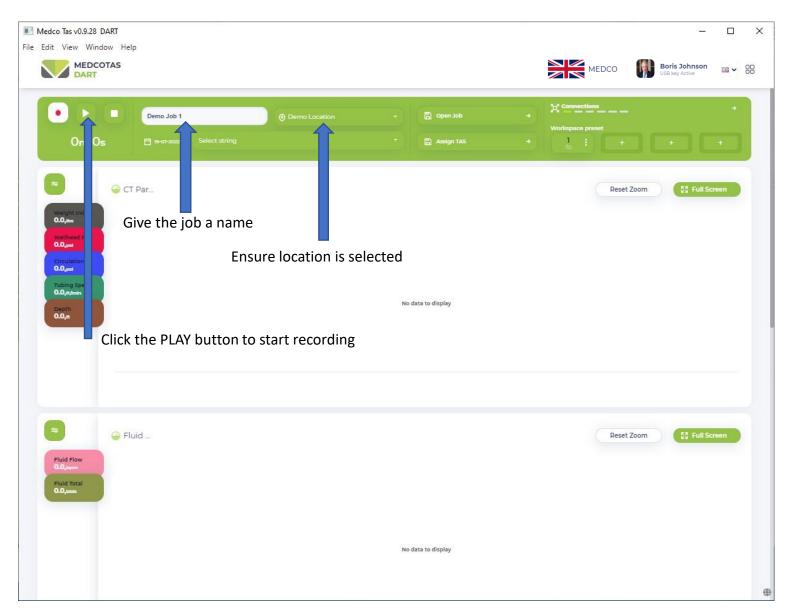

Data Display in Real Time




Correlation Charts Display

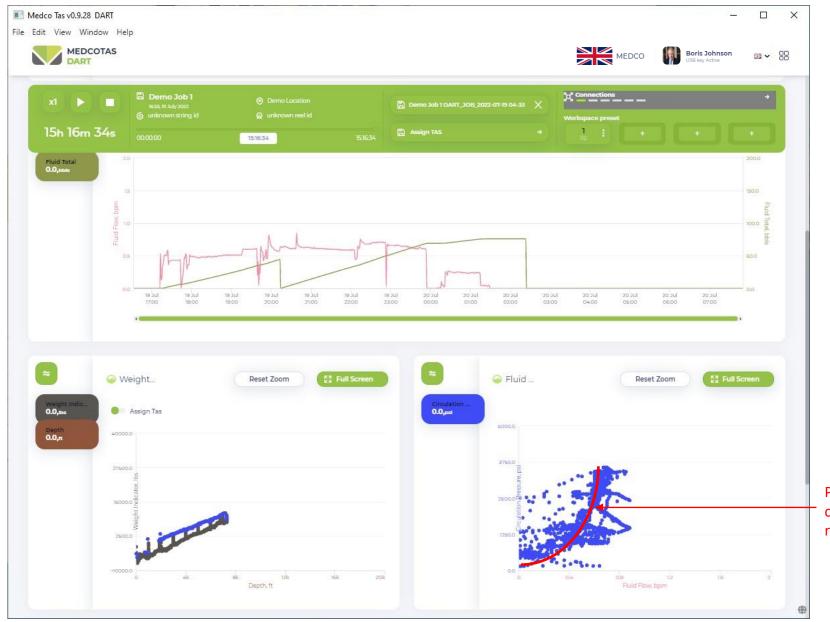


Pump/Circulation pressure correlation with fluid flow rate


Playback and Generating DART Reports

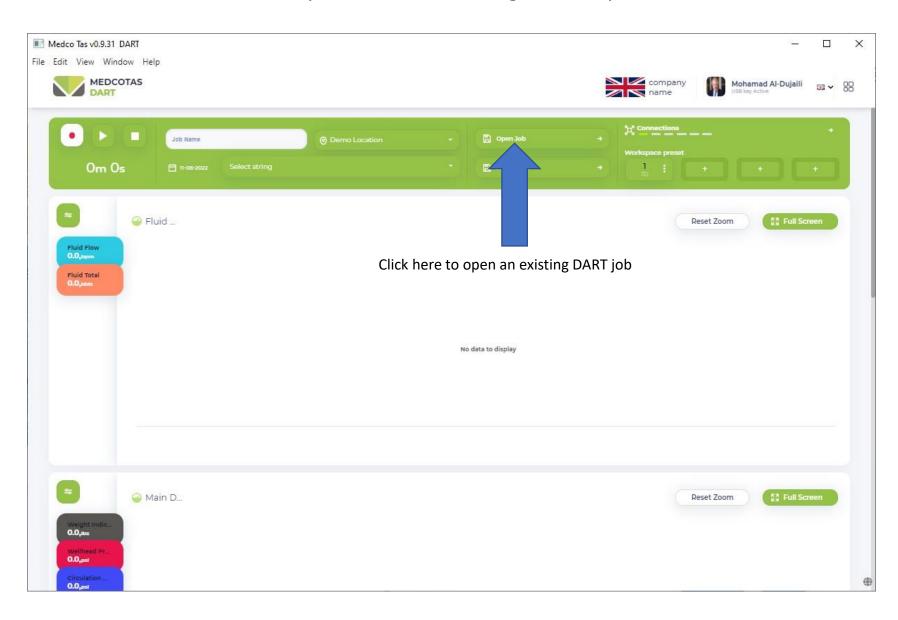


Assigning TAS Simulation Results

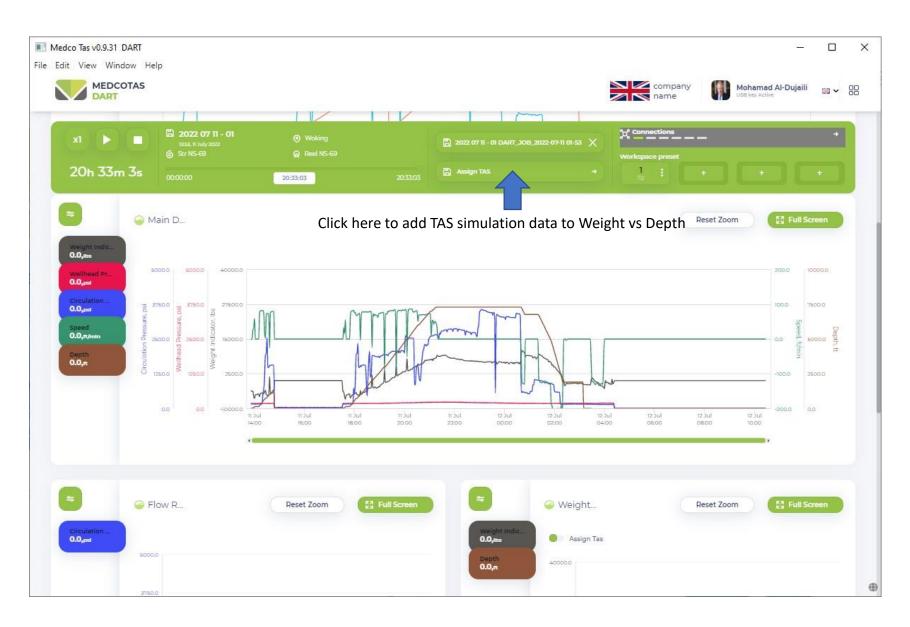


Selecting TAS Job

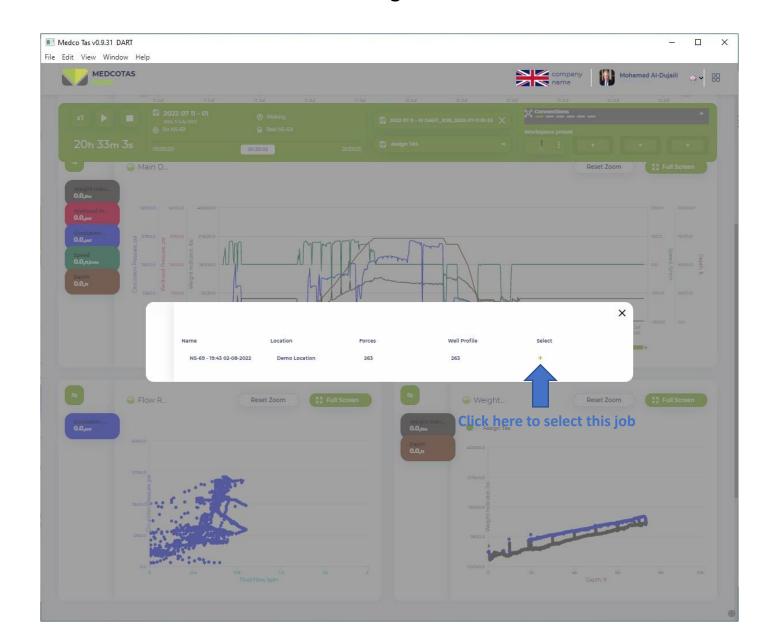


Add TAS Simulation Results to Weight vs Depth Chart

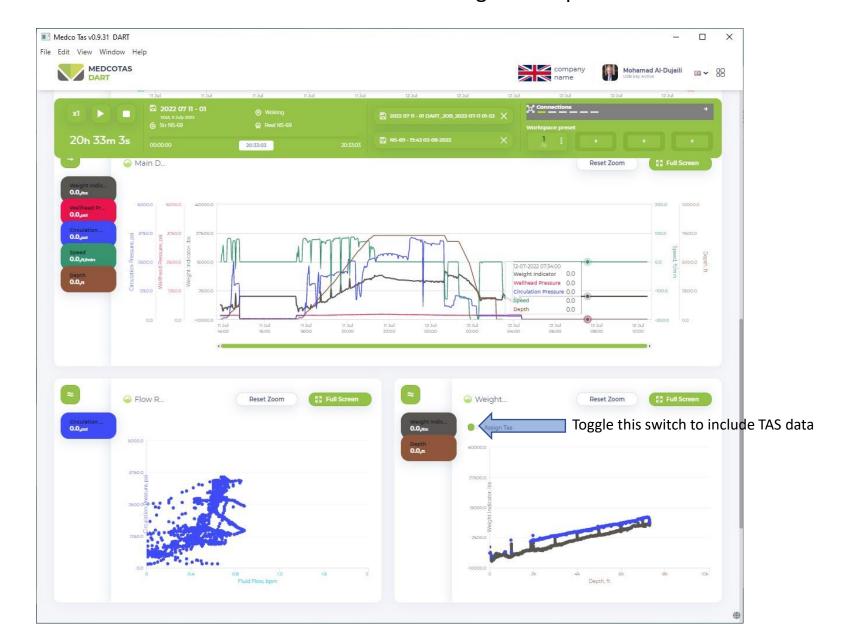


Generate DART Report

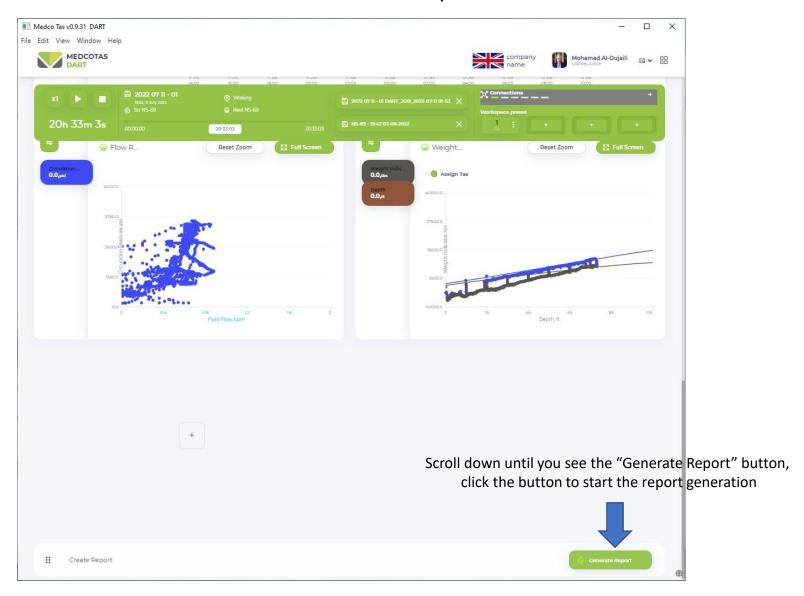


Customising DART Report

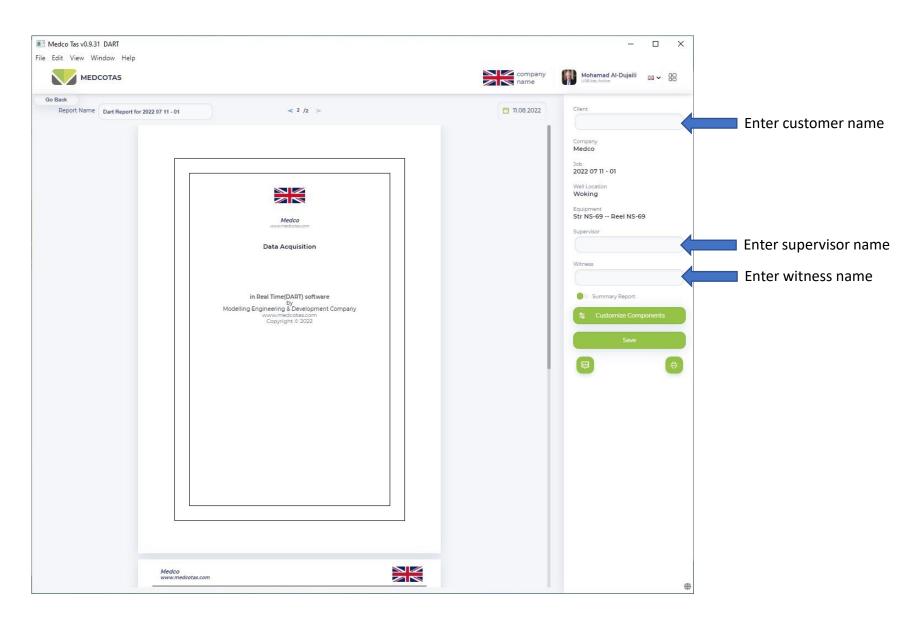


Customise DART Report ... continued

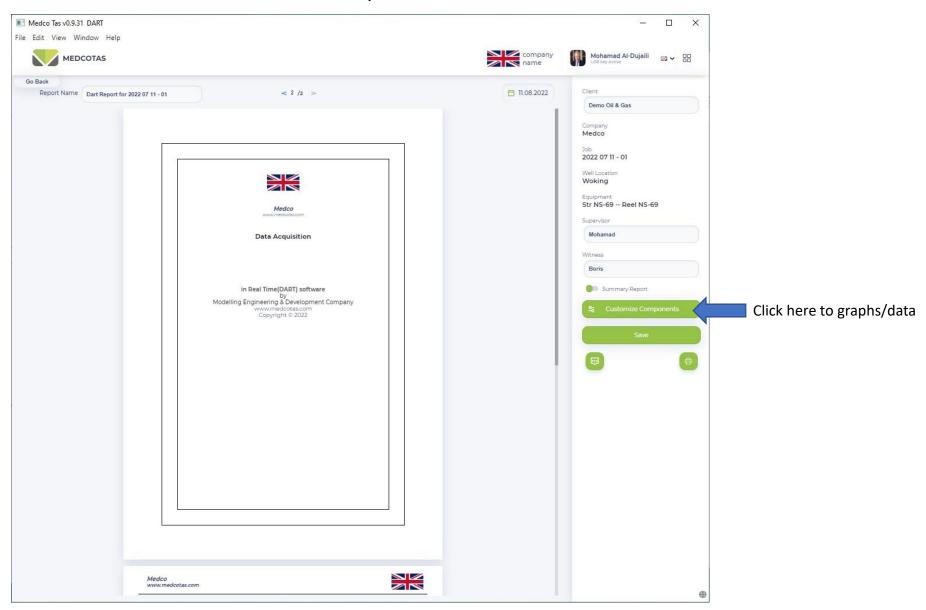


Adding Charts to the Report

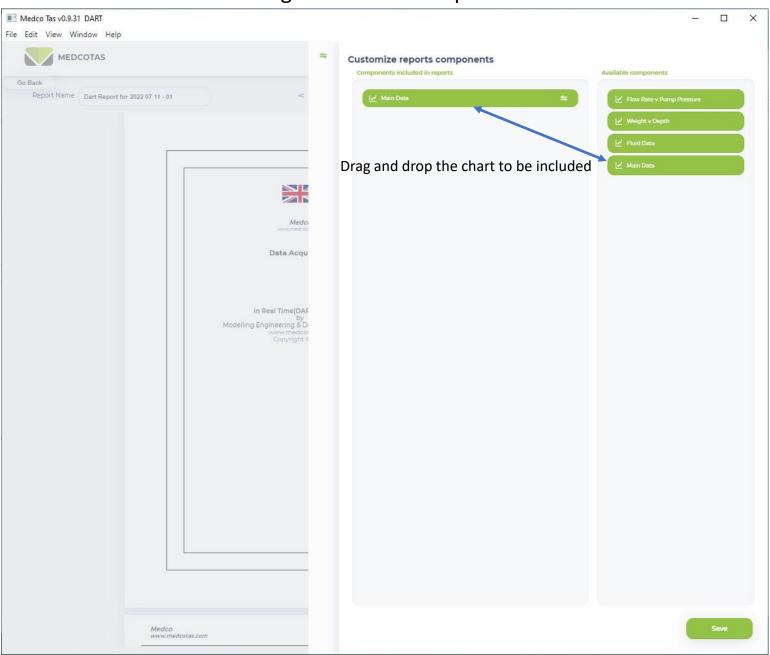


Further Chart Customising

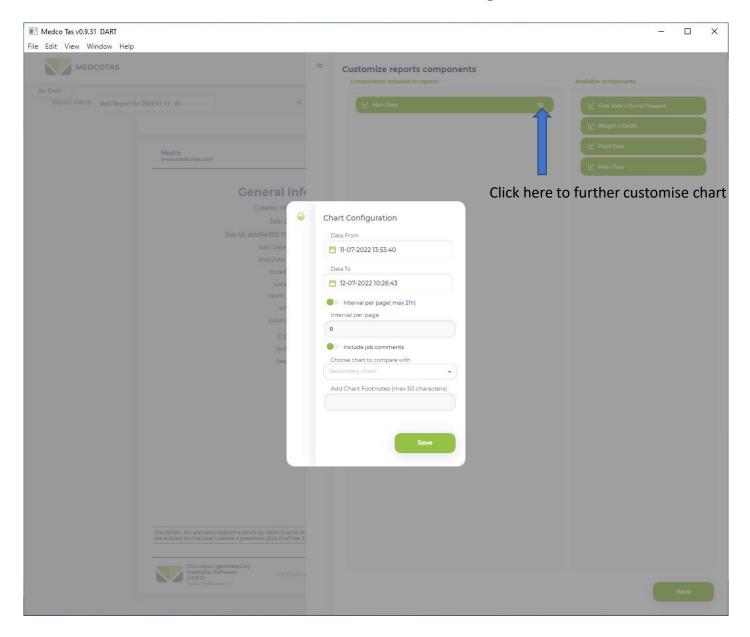


Split Chart into Smaller Intervals

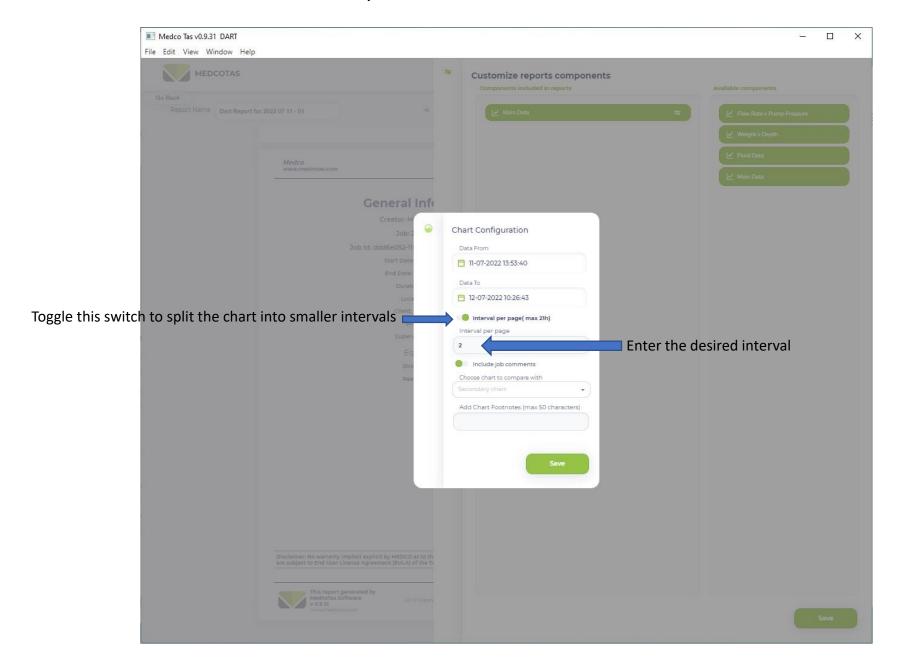

Add more Charts in DART Report

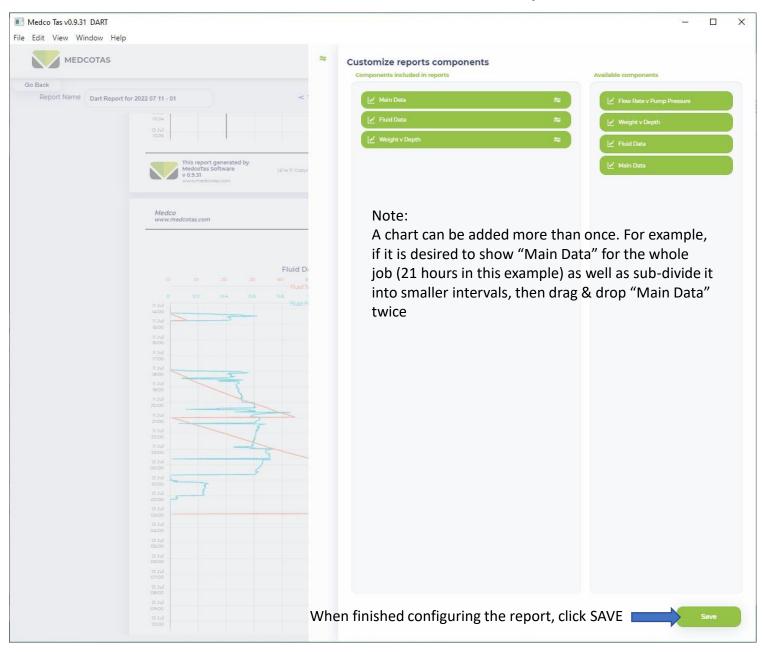

Report Ready to Publish

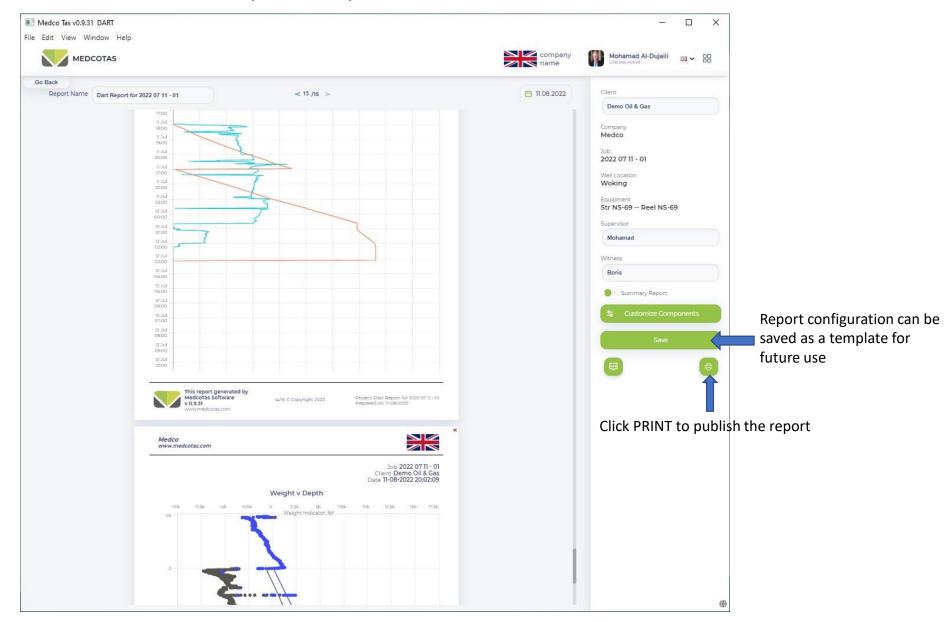

Printing/Publishing the Report

